


# Schneelasterhöhung *Friesland*

Augumentation de fret de neige - Abris-garages a toit plat

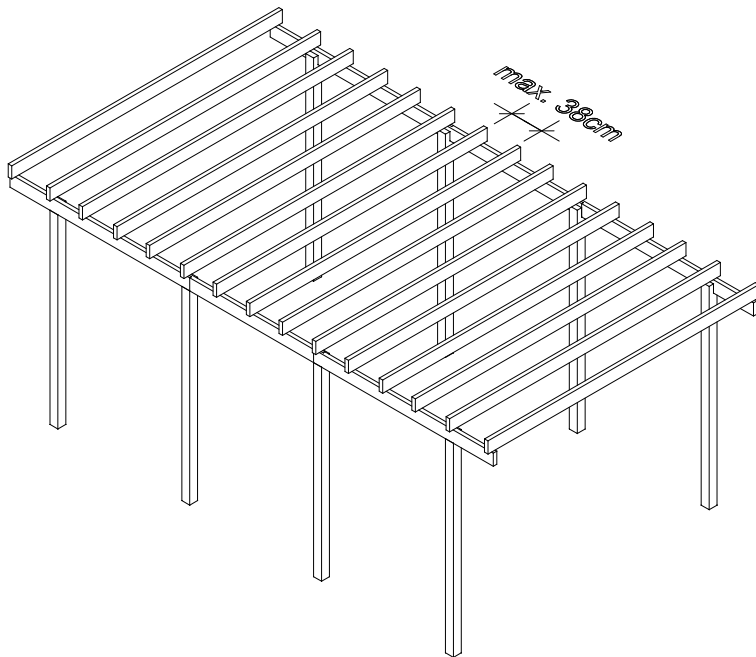

**Beachten Sie bei der Montage die Aufbauanleitung des Carports !**

Veuillez considérer avec l'assemblage le guide de construction du abris garages !

	<u>314x555cm</u> 39910 9	<u>314x708cm</u> 39911 6	<u>314x860cm</u> 39914 7	<u>397x555cm</u> 39912 3	<u>397x708cm</u> 39913 0	<u>397x860cm</u> 39915 4
<b>BH4/13-306</b>	6	8	10	-	-	
<b>BH4/16-389</b>	-	-	-	6	8	10
<b>B100</b>	12	16	20	12	16	20
<b>C105-0040</b>	96	128	160	96	128	160

	<u>557x555cm</u> 39900 0	<u>557x708cm</u> 39901 7	<u>557x860cm</u> 39907 9			
<b>BH5/22-549</b>	6	8	10			
<b>B100</b>	24	32	40			
<b>C105-0040</b>	192	256	320			